



— Quality Sealant Applicators —

## **INSTRUCTIONS:**

AVON OPERATING/MAINTENANCE INSTRUCTIONS

DISTRIBUTED BY:  
COX NORTH AMERICA, INC.  
8181 COLEMAN ROAD  
HASLETT MI 48840  
**800-822-8114**  
517-339-3330  
FAX: 517-339-3806  
[www.cox-applicators.com](http://www.cox-applicators.com)  
e-mail: [service@cox-applicators.com](mailto:service@cox-applicators.com)

For all service, parts and warranty repairs call **800-822-8114**

MANUFACTURED BY:  
PC COX (NEWBURY) LIMITED  
ENGLAND



# **OPERATING INSTRUCTIONS FOR MANUAL APPLICATORS**

## **DISPENSING**

Always use full trigger pulls.

To stop any product flow on, depress the release plate when dispensing is finished.


## **MAINTENANCE**

To ensure good performance, the fulcrum pins in the handle should be lubricated with WD40 (or equivalent) after every 10 cartridges.


Always wipe off any adhesive using the manufactures recommended solvent before it has time to cure.

Check the barrel screw, plungers, all external bolts and screws to assure they are tight. Tighten if found loose.


## AVON CARTRIDGE

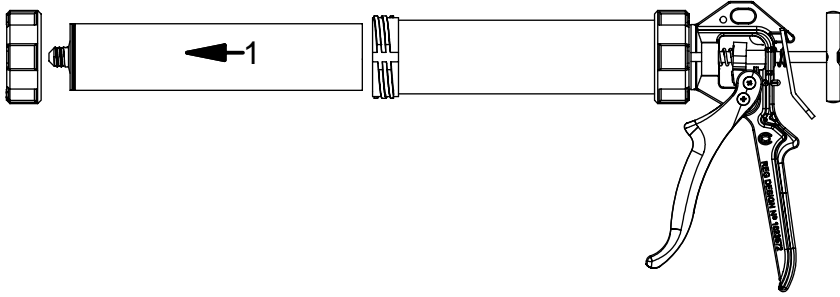


- 1) Remove cap and cartridge from gun
- 2) Depress and hold release plate
- 3) Retract rod until fully withdrawn
- 4) Insert new cartridge and replace cap

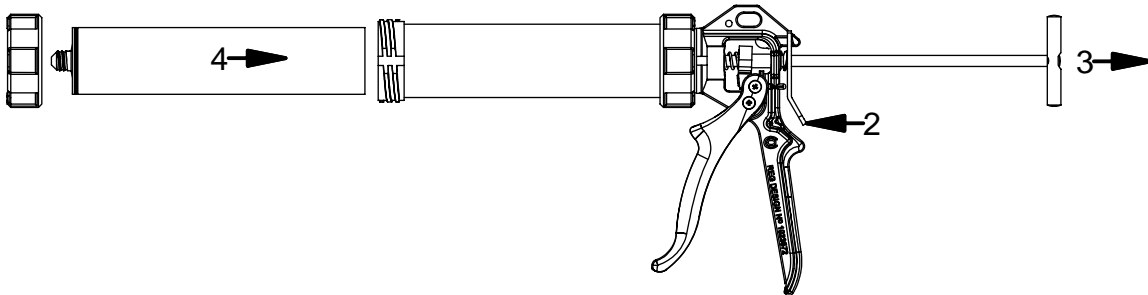


## AVON SACHET

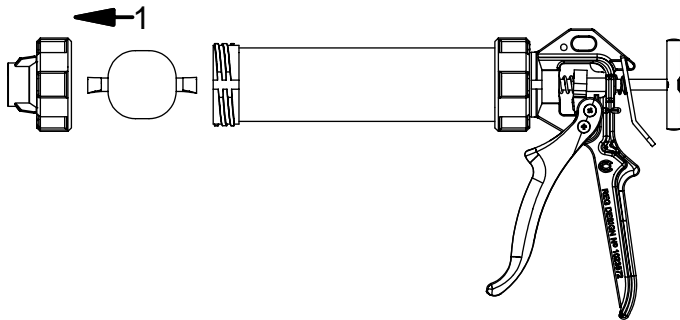

- 1) Remove cap/nozzle assembly and used sachet slug from gun
- 2) Depress and hold release plate
- 3) Retract rod until fully withdrawn
- 4) Insert new sachet, snip end to allow product out and replace cap/nozzle assembly

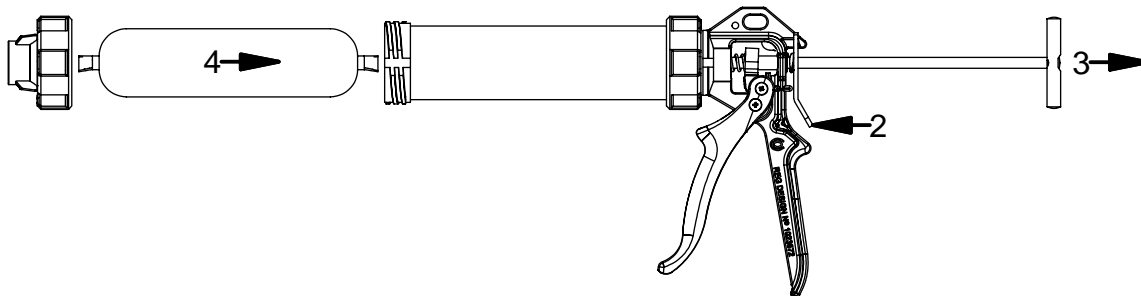


## AVON BULK

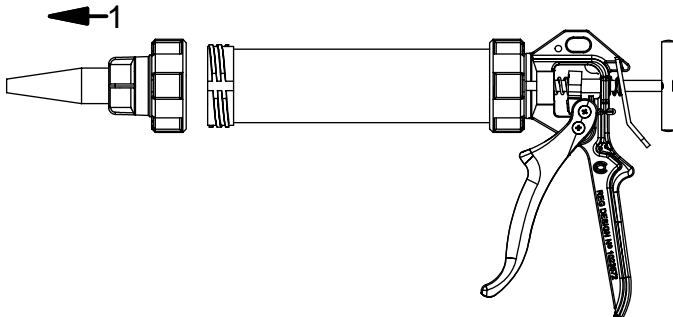


- 1) Remove cap/nozzle assembly, ensure rod is fully forward
- 2) Depress and hold release plate
- 3) Immerse end of barrel into bulk material and draw rod fully rearwards
- 4) Re fit cap/nozzle

This end of gun  
to be immersed  
in bulk material

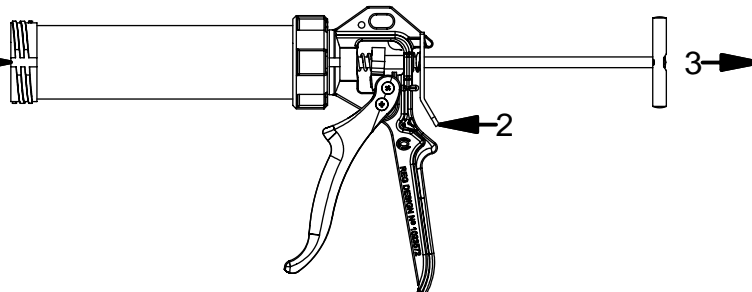





REMOVE CAP AND NOZZLE FROM GUN  
ENSURE THE ROD IS FULLY FORWARD

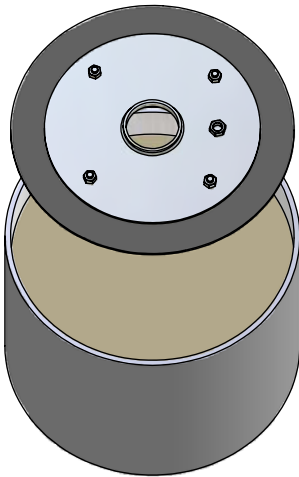

PUSH FOLLOWER PLATE INTO THE BUCKET AND  
ENSURE IT RESTS FLAT ON THE SURFACE OF  
THE BULK MATERIAL

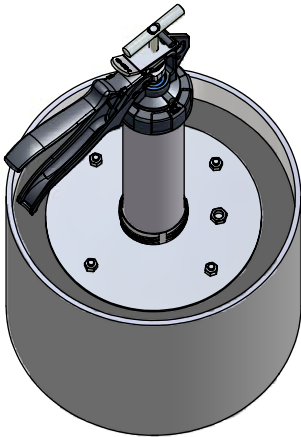

PLACE END OF GUN BARREL OVER FOLLOWER  
PLATE LIP. DEPRESS THE RELEASE PLATE AND  
DRAW BACK THE ROD, IN TURN DRAWING UP THE  
MATERIAL INTO THE BARREL. ENSURE THE  
BARREL STAYS FLUSH TO THE PLATE

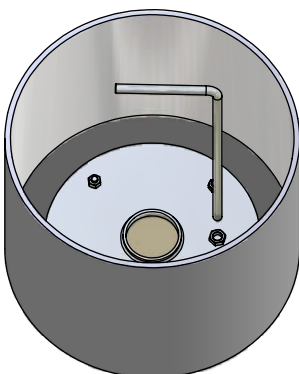

ONCE ALL THE BULK HAS BEEN USED,  
INSERT THE SUPPLIED HANDLE ROD  
INTO THE OPEN NUT ON THE SURFACE  
OF THE PLATE TO WITHDRAW THE  
PLATE ASSEMBLY.